



# Samsung Galaxy S4 Active SIM Card Replacement

Replace the SIM card.

Written By: Geoff Wacker



## INTRODUCTION

Use this guide to replace the SIM card on your Samsung Galaxy S4 Active.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Rear Case



- Pry with a plastic opening tool, or your fingernail, in the divot to the left of the rear-facing camera, near the power button.
- Lift the rear case by the corner nearest the divot and remove it from the phone.

## Step 2 — Battery



- Insert a plastic opening tool, or your finger, into the notch of the battery compartment and lift the battery upward in order to remove it.

## Step 3 — SIM Card



- Use a plastic opening tool, or your fingernail, to press the SIM card slightly deeper into its slot until you hear a click.
- After the click, release the card and it will pop out of its slot.
- Remove the SIM card.
- ★ During reassembly, push the SIM card into the slot until it clicks in place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:45:44 PM.